




Akuvox S562W


• WI-FI

Click the following:


1) More

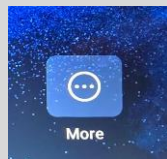


2) Settings

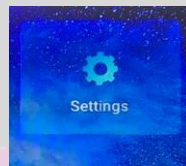

3) Advanced Settings

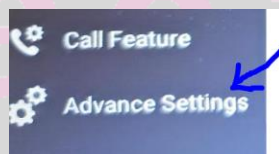

4) Enter Password (Default password is 123456)

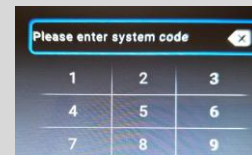

5) WI-FI



6) Turn WI-FI on



7) Let the system search for available WIFI, click on your WI-FI then enter password, Then Join